

# Getting Started

 
- 1 Turn on the projector and log into the laptop



- 2 On the laptop, choose Desktop annotation



- 3 Use your finger or the interactive pen as a mouse on the whiteboard

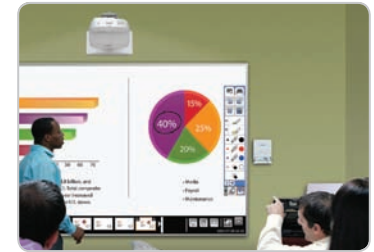


## Use the Interactive Whiteboard Alone


- 1 Select the whiteboard



 - 2 Turn on the interactive pen.

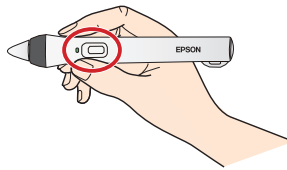

- 3 Start writing!

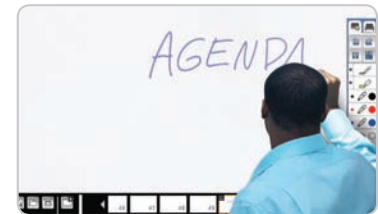 

### Running out of room? Add a page!

You can add up to 50 new pages to your whiteboard. Tap the thumbnails at the bottom of the screen to switch between pages.



### Add interest by changing colors

Tap a pen color to select the active color. Tap the down arrow next to a pen to choose a custom color. Tap the smaller or larger circle to choose a thin or thick line.



### Wipe away mistakes with the eraser

Tap the Eraser icon or press the button on the pen to enter eraser mode.



### Duplicate the page

Tap the duplicate page icon to create a duplicate of the current page as a new page.



### Not sure what that icon does?

Tap the Help icon to display an on-screen guide to the whiteboard icons.

## Get Help

Contact User Services:  
785-670-3000  
support@washburn.edu

For more information about how to use this and other Active Classrooms, go to:  
<http://www.washburn.edu/active-classrooms>

